


## Here is a short description on how to use the tool SetDateTime.exe

[Get instrument date/time] delivers the actual time of an AMV:

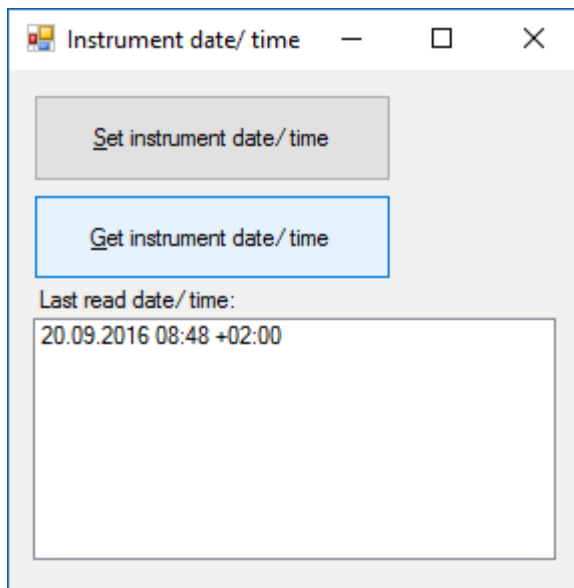

[Set instrument date/time] sets the clock to the actual date/time of the PC the AMV is connected to.

PLEASE NOTE: The displayed time in the tool is not updated automatically, you have to click the second time the [Get instrument date/time] button to get the updated value.

